

Internal Camper Anchor Point:

Located in the inner corner of the truck camper



External Camper Anchor Point

Located on the outside of the truck camper or on the camper jack

